



SENS SRF KEY

The SRF Key is designed to work with the alarming SENS devices and is used to arm and disarm the SENS devices. Each SRF Key retains one unique ID code, but the ID code can be changed the SRF Key Manager; you can change the code to pair the remote with your SENS devices.

To set the ID code and arm the product:

Place the SRF Key within 20 cm. of the device to activate it and press the small (set) button. The device will beep once and the LED will flash green twice to indicate the ID code has been set.

To stop the alarm:

Hold the SRF Key within 20 cm. of the device and press the big (release) button.

Deactivation:

Hold the SRF Key within 20 cm. of the device and press the big (release) button. The device will beep once and the red LED will flash once to indicate the device is disarmed.

Low battery indicator:

If the red LED flashes continuously its indicating that the battery is out of power and needs to be replaced.

Normal operation:

The LED will flash green and every 20 seconds.

Specifications

Description	SENS SRF Key
Article code SRF Key	200 000 020
Battery type	CR2450 (600mAh)
Dimensions	72 * 35 * 16 mm

